

# PT1000 Transmitter

Resistance-to-digital converter for platinum resistance temperature detector. This device, belonging to the PRO sensor series, includes Aranet Sub-GHz ISM band radio which wirelessly transmits sensor measurements to the Aranet PRO base station.





#### **Product numbers**

European Union	TDSPT506.010
United States	TDSPT5U6.010
Asia	TDSPT5U6.010

## Temperature measurement performance

Probe compatibility	PT1000 (any class)	
Range	-200–600 °C	-328–1112°F
Resolution	0.1 °C	0.1°F
Accuracy at ±0 °C (32 °F)	±0.26 °C	±0.47 °F

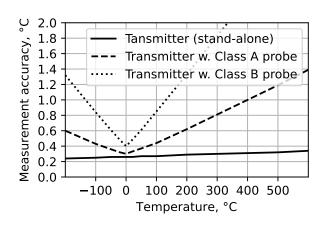

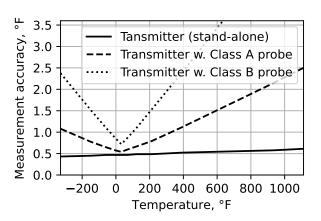

- This transmitter uses 4-wire probe configuration. However, it is compatible also with 2-wire PT1000 resistor. 3-wire version available on request.
- The table displays the three-sigma (99.7 %) confidence error attributed solely to the transmitter when operating at



25 °C (77 °F). The overall measurement uncertainty depends on the accuracy of the PT100 probe used. Refer to the figures provided above for the calculated total accuracy values of the transmitter when used in combination with standard Class A and Class B platinum sensors.

#### Probe cable specifications

Length	1m	3.3 ft
Cable material	Silicone	
Operating temperature	-40-200 °C	-40-392°F

### **General specifications**

Ingress protection rating	IP68		
Operating temperature	-40-60 °C	-40–140 °F	
Dimensions	$\emptyset$ 35×120 mm	∅1.4×4.7 in	
Weight (incl. battery)	100 g	3.5 oz	
Enclosure material	ASA plastic		
Power supply	1 pc AA battery	1 pc AA battery	
Packaging includes	1 pc AA alkaline battery, pol	1 pc AA alkaline battery, polyester string for hanging the device	

## Aranet radio parameters

Line of sight range	3 km	1.9 mi	
Transmitter power	14 dBm	25 mW	
Data transmission interval	1, 2, 5 or 10 min		
Data protection	XXTEA encryption		

## **Battery lifetime**

Measurement interval	Alkaline battery lifetime	Lithium battery lifetime
1 min	1.8 years	2.4 years
2 min	3.3 years	4.5 years
5 min	6.8 years	9.8 years
10 min	10 years	>10 years

- Battery lifetime data has been obtained by mathematical extrapolation and is provided for descriptive purposes only and is not intended to make or imply any guarantee or warranty.
- Battery lifetime tests and calculations performed assuming device is at 20 °C (68 °F) and using *Fujitsu Premium LR6G07* (alkaline) and *Energizer Ultimate Lithium L91* (lithium) AA batteries as reference.
- The operating temperature range may vary based on the battery type used. Generally, the range for alkaline batteries




is between -20-50 °C (-4-122 °F), whereas for lithium batteries, it is -40-60 °C (-40-140 °F).


#### Pairing process description

As part of the Aranet PRO product series, this device enables wireless sensor reading transmission to the Aranet PRO and PRO Plus base station. Here's how to pair the sensor with the base station:

- Place the sensor within 20 m (60 ft) of the base station during pairing. Once paired, it can communicate over a much greater distance (up to 3 km / 1.9 mi line of sight).
- If the sensor uses a power supply unit, unplug it. Open the sensor casing and remove the battery for at least 20 seconds. Alternatively (for newer hardware revisions), locate the PAIRING button on the sensor PCB which can be used to initiate pairing without the removal of battery.
- Access the SENSORS menu in the base station Web GUI. Set the measurement interval and select PAIR SENSOR to start the pairing process.
- Within a 2-minute window, insert the battery or press the PAIRING button on the sensor PCB (for newer hardware revisions) to initiate pairing.
- A successful pairing is indicated by the sensor appearing in the Web GUI and a specific LED blink sequence on the sensor PCB (one to three short blinks followed by a longer fade-out blink of the LED):

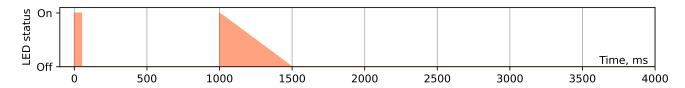

• If pairing fails, the sensor won't appear in the Web GUI, and the LED blink sequence will consist only of three short blinks. In this case, repeat the procedure closer to the base station.

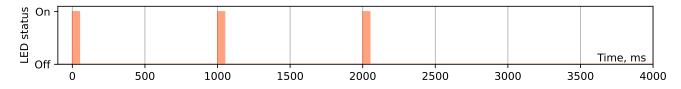

 After successful pairing, customize parameters like name and tags in the Web GUI. Close the sensor casing and install it in the desired location.

## **Compliance information**

**C** Conformité Européenne

Federal Communications Commission (USA)

Innovation, Science and Economic Development Canada